 


CHANGING THE RIBBON

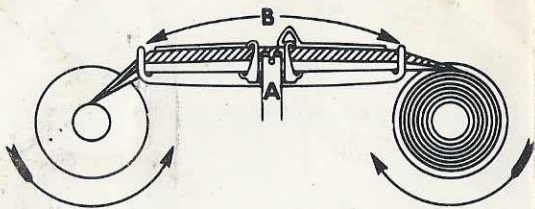

When ordering ribbon, please specify Travel-riter spooling (core-type), ½ inch width by 10 yards length, single color.

1. Remove top cover (17).
2. Move Auxiliary Ribbon Reverse (26) to its left position.
3. Wind all the ribbon onto RIGHT spool. (Turn spool by placing finger on top of spool cover.)
4. Press down Left Shift Lock Key (24) and disengage ribbon from Vibrator (A).
5. Remove spool-tops; swing ribbon lugs away from spool. Lift ribbon from slot in left spool. Lift metal core, with old ribbon, from right spool and discard.
6. To replace the ribbon, swing spool lugs out from posts. Place metal core with new ribbon on right spool, making certain that ribbon unwinds from back of spool.
7. Place end of ribbon with metal tip into slot on left spool.
8. Place ribbon through slots in writing line guide (B) and through Ribbon Vibrator (A).
9. Replace tops on spools. Replace top cover and you are ready to type.

GENERAL CARE OF YOUR REMINGTON TRAVEL-RITER PORTABLE TYPEWRITER

Reasonable care on your part will insure years of satisfactory performance from your typewriter. A typewriter's principle enemy is dust. Keep your typewriter covered when not in use. Clean the typefaces occasionally with a brush to remove accumulated lint and ink.

Do not clean your typewriter's surface with alcohol as it is injurious to the finish.

Once in a while you may put a drop or two of oil on each of the two rails on which the carriage moves and then rub it off again. Never attempt to oil the type-

bars or any other part of the mechanism as this may have a tendency to gum and clog the working parts.

Your Remington Portable was carefully inspected before it was delivered to you. If it ever does need adjustment or repair, take it to the nearest Remington Rand Typewriter Service Station or to an authorized Remington Rand Dealer where trained servicemen will give it expert attention.

You will find that if you take good care of your Remington it will repay you with years of faithful service.

OPERATING INSTRUCTIONS for the

NEW REMINGTON

Travel-riter

PORTABLE TYPEWRITER

light
versatile
responsive
speedy
durable
beautiful printwork

 


**FOR THE STUDENT AND FOR
THE TYPING NEEDS OF THE HOME**

Remington Rand DEALER SALES


DIVISION OF SPERRY RAND CORPORATION

NEW YORK 10, NEW YORK

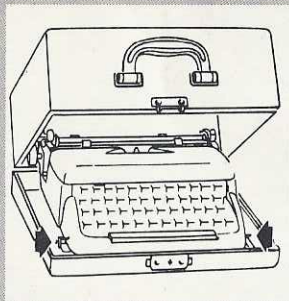


TO REMOVE MACHINE FROM CASE

 Note the two clamp levers attached to the bottom of case at sides of machine (ARROWS). Merely hold down these levers with the thumbs. Simultaneously raise the front of the machine with the fingers, lift the machine forward and out of the case.

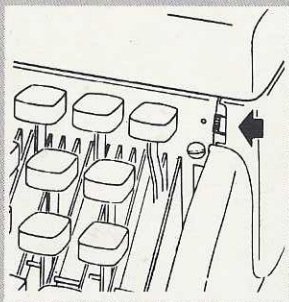

TO RELEASE CARRIAGE

 Simply flick the Carriage Centering Lever (ARROW) UP to disengage the carriage. Carriage is now free to move. To LOCK CARRIAGE, press Carriage Centering and Locking Lever DOWN and center the carriage by moving forward the Carriage Release Lever (3).

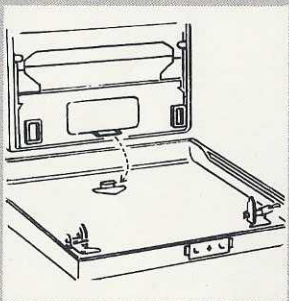


TO REPLACE MACHINE IN CASE

Note lug attached to case at rear (ARROW). To replace the machine, position the typewriter so that this lug engages the metal slot attached to the underside of the machine. Then, lower the machine into the case until the two clamp levers, at the front of the case, snap shut. **IMPORTANT** - BEFORE CLOSING COVER OF CASE, BE SURE TO CENTER AND LOCK CARRIAGE WITH CENTERING AND LOCKING LEVER.


INSERTING THE PAPER

 Insert paper behind platen, holding paper with left hand while turning right cylinder knob. When paper appears at front of platen, place paper bail (13) onto paper. (Twin rollers on paper bail should be positioned to divide paper in thirds for best results.)

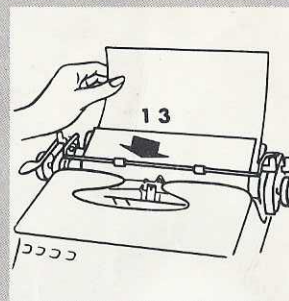


ADJUSTING THE PAPER

 
If necessary, the paper may be adjusted by moving forward the Paper Release Lever (15), and lifting bail to its upright position. Paper is then free for adjustment. When paper is adjusted, return Paper Release Lever and paper bail to their original positions.

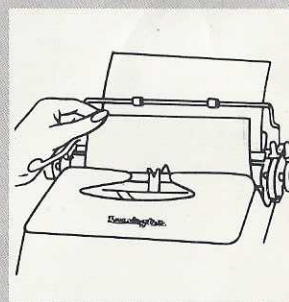


MARGIN SETTINGS

  To set your margins, press downward on the left hand Adjustable Margin (ARROW) and move to the point on the Paper Table Scale where the writing line is to begin. Then, press downward on the right hand Adjustable Margin (ARROW) and move to the point where the writing line is to end. Your margins are set. To change, repeat the operation.

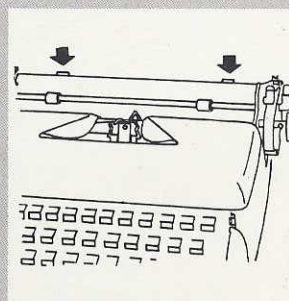


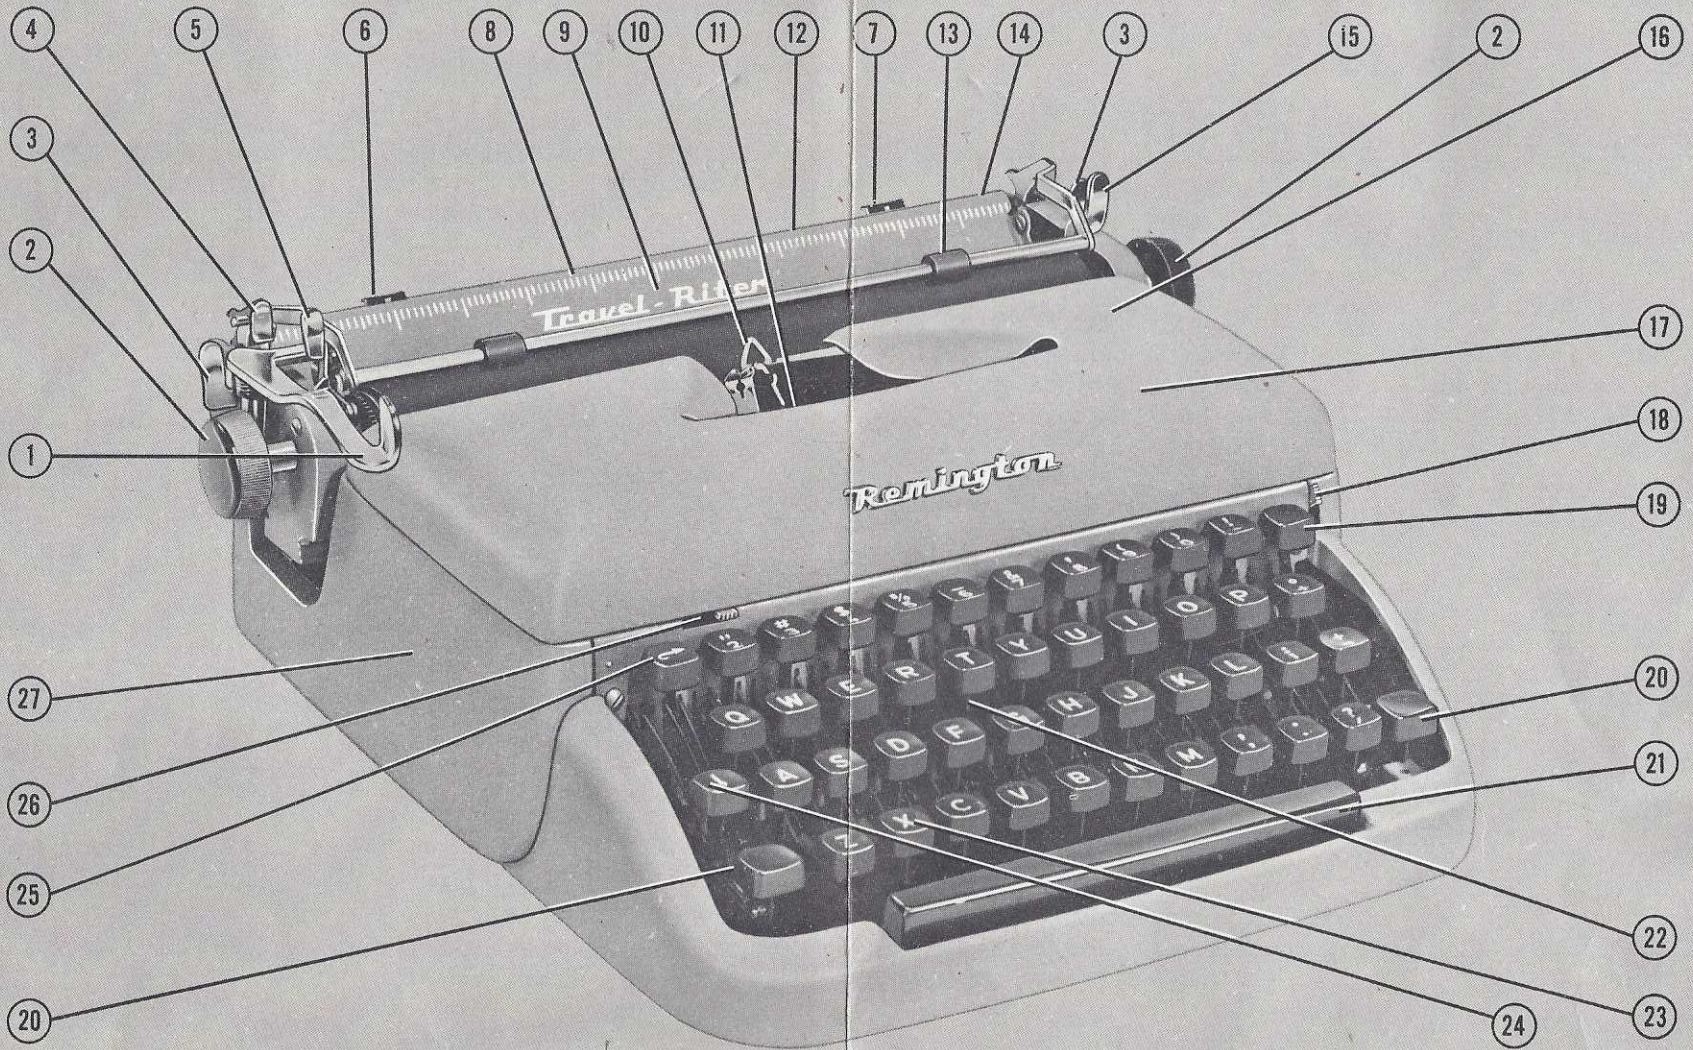

PRINCIPAL

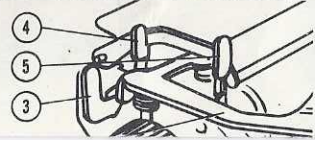 

OPERATING FEATURES

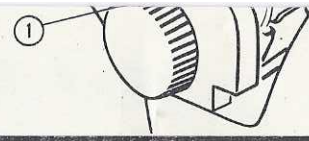 

1. Sturdy carriage return and line space lever.
2. Left and right cylinder knobs.
3. Left and right carriage release levers.
4. Line finder for typing out of regular spacing.
5. Single and double line space selector.
6. Adjustable left hand margin.
7. Adjustable right hand margin and line lock.
8. Easy-to-read graduated scale on paper table for margin setting.
9. Positive paper feed.
10. Permanent card writing finger on writing line guide holds cards for writing from extreme top to bottom, and from edge to edge.
11. Segment shift for capital letters and upper case characters.
12. Writing line 8½ inches.
13. Twin roller paper bail.
14. End of line bell ringer.
15. Paper release lever.
16. Automatic ribbon reverse.
17. Removable top cover.
18. Carriage centering and locking device.
19. Margin release key.
20. Left and right shift keys.
21. Standard space bar.
22. Full 42-key keyboard—4 row—84 characters—includes five educational characters on keyboard:
! (exclamation), ° (degree), ÷ (division), + (plus), = (Equal)
23. Plastic non-glare speed keys.
24. Shift lock.
25. Back space key.
26. Auxiliary manual ribbon reverse.
27. Sturdy frame construction.

 
(Warranty—90 days from date of purchase.)



The New Remington Traveler is supplied with a sturdy carrying case finished in a brown grained fabric.

NOTE: The top cover (17) is removable for easy access to ribbon spools and routine cleaning. TO REMOVE TOP COVER: grasp cover firmly and lift off. TO REPLACE TOP COVER: position the cover so that the rear lugs are fitted into slots at left and right. Press firmly on front of top cover to snap into place.

“...AND AGAIN THIS YEAR, THROUGHOUT THE WORLD, PEOPLE ARE BUYING MORE REMINGTON TYPEWRITERS THAN ANY OTHER BRAND.”

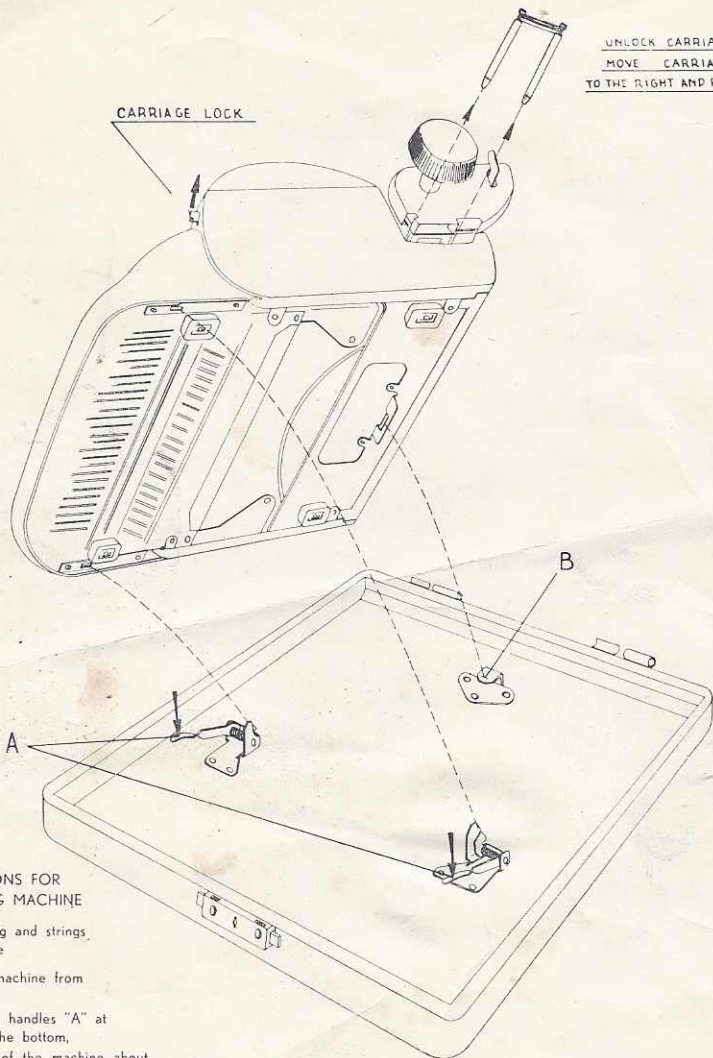

UNLOCK CARRIAGE
MOVE CARRIAGE
TO THE RIGHT AND PULL

CARRIAGE LOCK

B

A

INSTRUCTIONS FOR
UNPACKING MACHINE

1. Remove filling and strings from machine
2. To remove machine from case bottom:
 - Push both handles "A" at once to the bottom,
 - Lift front of the machine about one inch, then move machine a little to the front to disengage the machine from the hook "B".